1.7 LITRE CORDLESS STAINLESS STEEL JUG KETTLE

Model Number: IG7250 / IG7300

INSTRUCTIONS FOR USE

Thank you for purchasing this product.
Please read these instructions carefully before use

Having trouble with your kettle? …

Try our troubleshooting guide on page 4.

If that does not solve the issue contact us …

2 YEAR GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.
The warranty **does not** cover consumable parts that require replacement under normal use or accessories. This includes filters, belts, and accessory attachments.

1. If a fault develops within 6 months of purchase it should be returned to the place of purchase for exchange.
2. If the fault develops after 6 months and within 24 months of purchase please contact our customer service department 01473 271 272 or write to us at the address detailed below.

Please quote the model number which begins **IG**, the 'Batch Number' beginning **'5'** and give details of the exact fault.

We will then decide whether to repair or replace the item. You will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced under guarantee within 2 years, the guarantee for the replacement item will be calculated from the purchase date of the original.

Before calling the Customer Service number please ensure you have checked the Troubleshooting guide.

iGENIX

Tel: 01473 271 272
Fax: 01473 270 733
Email: info@igenix.co.uk
Website: www.igenix.co.uk

Postal Address:
Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original

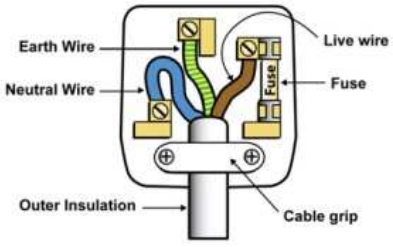

This product must be earthed. Fit a 13A BS1362 fuse in a 13A BS1363 plug. Fit the green/yellow wire to E, the blue wire to N and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

Disclaimer

Updates to hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Disposal of Old Electrical Appliances

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

SAFETY INSTRUCTIONS

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

1. This kettle is designed for domestic use only and NOT for commercial applications. No responsibility is accepted for damage resulting from improper use or non-compliance with these instructions.
2. Read these instructions before use and keep in a safe place.
3. Ensure that the electricity supply in your home is rated at 220 - 240 volts before operating the appliance.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Do not use or keep the kettle outside.
6. Always unplug the appliance before attempting to move it.
7. Repairs to electrical appliances are only to be undertaken by a trained personnel. Repairs by untrained professionals can be dangerous.
8. To protect against fire, electric shock and injury to persons do not immerse the cord, plug, kettle or base in water or any other liquid.
9. Unplug from the power socket when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
11. The use of accessories not recommended and may result in fire, electric shock or injury to persons.
12. Do not let the cord hang over the edge of the table or counter, or touch a hot surface.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Operate on a firm, flat surface out of reach of children.
15. Do not use appliance for other than intended use.
16. To disconnect from the power supply, ensure that switch is in the “Off” position and remove plug from the power socket. Always hold the plug, never pull the cord.
17. Some parts of appliance are hot when operated, so do not touch with hand. Use handles only.
18. Do not let the kettle operate without water.
19. Avoid contact with steam from the spout during or after boiling.
20. Take care when pouring boiling water.
21. The base cannot be used for anything other than its intended use.
22. The kettle can only be used with the base provided.
23. If the kettle is filled past the MAX level, boiling water may spill out.
24. Ensure the lid is firmly closed and do not open the lid whilst boiling.
25. Never modify the kettle in anyway. Unauthorised modifications will void your warranty.

SPECIFICATIONS

Voltage:	220-240V, 50Hz
Power consumption:	3000 Watts
Capacity:	1.7 Litre

IG7250 & IG7300 – 1.7 Litre Cordless Jug Kettle at a Glance

A. LID

B. FILTER

C. KETTLE BODY

D. WATER GAUGE

E. CORDLESS BASE

F. ON/OFF SWITCH

G. LID OPEN BUTTON

Operating Instructions

Before First Use

Before using the kettle for the first time, fill with water to the MAX level, boil and pour away. Repeat this several times using fresh water each time you boil the kettle.

Using your Kettle

- Place the cordless base (E) on a level firm surface.
- Where ever possible fill the kettle through the spout as this will help to reduce the amount of limescale that builds up on the filter.
- The amount of water can be measured by the level mark (D) on the outside of the kettle. Never fill the kettle above the MAX level and ensure it is always above the MIN level.
- Only fill the kettle with the amount of water you need as this will save electricity.
- Always make sure that the lid is properly firmly closed.
- Place the kettle on the cordless base (E) making sure it is positioned correctly.
- Plug in and switch on at the wall socket.
- Put the ON / OFF switch (F) to its 'ON' position and the switch will illuminate.
- When the water boils the kettle will switch off automatically. The kettle can be switched off manually by putting the switch (F) to the 'OFF' position.
- To re-boil the kettle, switch on again. If the appliance has just switched off, wait a minute or so before switching back on.
- When the kettle has boiled the water may be poured out through the spout.
- This kettle is fitted with a safety cut-out to protect the kettle from damage in case of inappropriate use.
- Should the kettle be accidently operated without water or if all of the water has evaporated, the safety cut-out will automatically switch off the heating element.
- In such a case, remove the plug from the wall socket immediately and refill the kettle. Allow the element to cool for a few minutes and then start using the kettle as normal.

Descaling

IMPORTANT: As this kettle is fitted with an immersed element it must be regularly descaled. The frequency of descaling depends on usage and the hardness of the water in your area.

Excessive amounts of scale can cause the kettle to switch off before reaching boiling point and cause damage to the element which is not covered by the guarantee.

- Any regular descaling agent may be used, provided the relevant instructions are observed.
- Do not fill the kettle to the upper mark to avoid spillage if the descaling agent causes the water to foam.
- To clean the kettle thoroughly of any decalcification residues, let it go through several boiling cycles using clean water with each cycle. Rinse the kettle with clean water afterwards.

Cleaning and Care

- Before cleaning the kettle, ensure it is disconnected from the power supply and has cooled down completely.
- Do not use abrasives or harsh cleaning solutions.
- Do not immerse the base or the kettle in any liquid. To clean the exterior, use a slightly damp lint free cloth.
- It is advisable to remove limescale deposits at regular intervals.

Troubleshooting

Problem	Possible Cause	Solution
The kettle does not work.	1. Not properly plugged into the mains wall socket. 2. No electricity in the mains wall socket. 3. On/Off switch not turned on. 4. Safety cut-out activated.	1. Plug in firmly 2. Check fuse or breaker. 3. Push on/off switch to on. 4. Fill the kettle and allow to cool for a few minutes.
The kettle cuts out before it boils.	1. Large build up of scale in the kettle.	1. Use a descaling agent to clean the kettle.
Kettle scales up quickly.	1. You live in a hard water area.	1. Regularly de-scale your kettle